

## INSTALLATION INSTRUCTIONS

Copy Part# 767328, Rev. D, 07/2014

Page 1 of 1

## SEASTAR HELM SERVICE KIT BAYSTAR PART # HP6032

## NOTICE

This kit will NOT work with helm pumps;

HH5279-3 HH5281-3	НН5279 НН5280, НН5281 НН5282, НН5283
	·
HH5217-3 HH5218-3	НН5217 НН5218
HH5224-3	HH5224
HH5225-3	HH5225
	HH4015, HH4016

This helm service kit is for use with ALL BayStar and SeaStar helms (See Notice below for exceptions).

- 1. Remove Steering Wheel.
- 2. Remove Woodruff Key (item 2).
- **3.** Loosen and remove the three Phillips head screws (item A). **NOTE:** Item A is not included in kit, do not misplace.
- 4. Remove Top Plate (item 4).
- 5. Remove old Quad Ring Seal from helm face.
- 6. Lightly lubricate new Quad Ring Seal (item 1).
- **7.** Place new Quad Ring Seal (Item 1) into position. **NOTE:** Ensure Quad Ring Seal is fully seated into the grove.
- **8.** Install Top Plate (item 4). **NOTE:** Ensure CE mark is placed at top dead center (UP).
- **9.** Install three Phillips head screws (item 5), torque to 6–9 in-lb.
- **10.** Using a good quality marine grease, lubricate steering shaft.
- **11.** Install Steering Wheel and torque Wheel Shaft Nut (item 3) to 150 in-lb. **NOTE:** DO NOT exceed 200 in-lb.
- 12. Fill and purge system free of air.

ITEM NO.	QTY. (in Kit)	DESCRIPTION	NOTE NOTICE  NOT AVAILABLE IN KIT,  ORDER PART# HA5431
1	1	Quad Ring Seal .210 70DUR N	FOR REPLACEMENT.
2	1	Key	(2)
3	1	Nut, 5/8" NF, Jam	
4	1	Top Plate	
5	3	Screws	
		<u></u>	* IF REMOVAL OF MOUNTING NUTS AND WASHERS IS REQUIRED, RE-TIGHTEN TO 100 in-lb DURING INSTALLATION (DO NOT EXCEED 110 in-lb)

Figure A. SeaStar Front Mount Helm shown.